

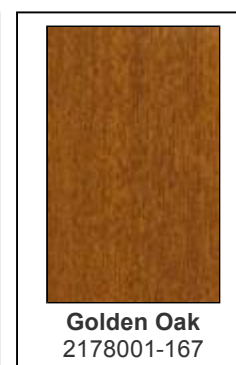
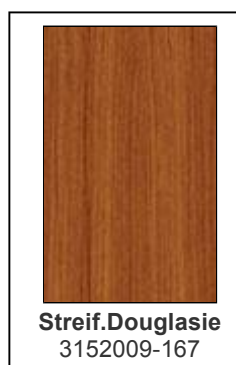
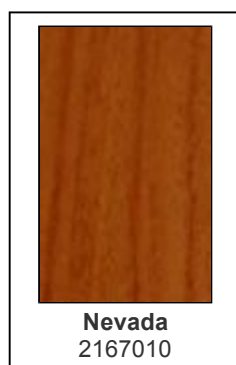
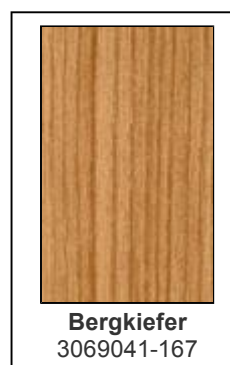
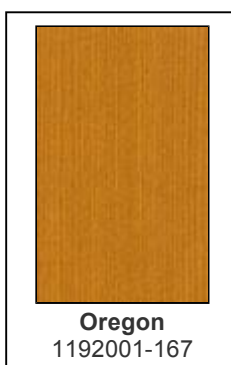
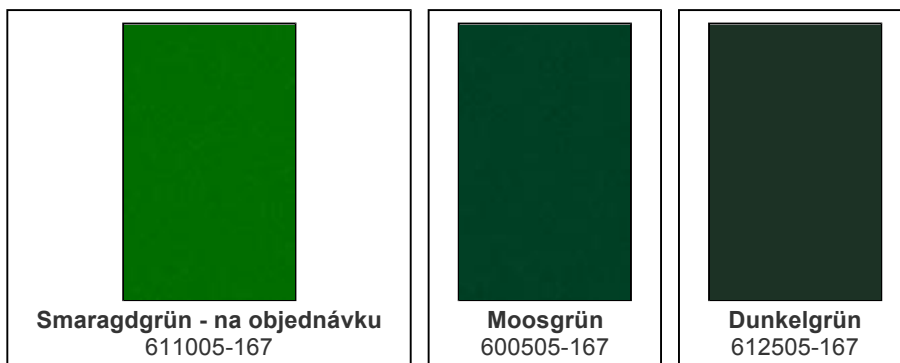
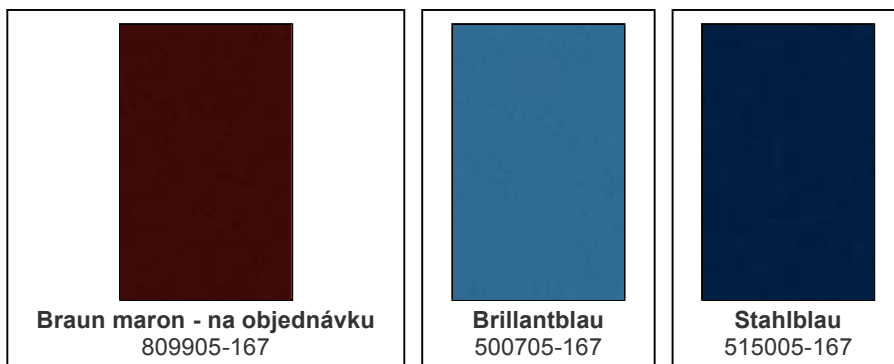


## Fólie RENOLIT

Název folie	Číslo	Název folie	Číslo
Oregon - na objednávku	2115008-167	Oregon	1192001-167
Bergkiefer	3069041-167	Sierra	2167009
Nevada	2167010	Streif.Douglasie	3152009-167
Golden Oak	2178001-167	Eiche natur	3118076-168
Eiche Hell	2052090-167	Nussbaum	2178007-167
Eiche rustikal	3149008-167	Eiche dunkel	2052089-167
Mahagoni	2097013-167	Sapeli	2065021-167
Black cherry	3202001-167	Weiss	915205-168
Cremeweiss	137905-167	Hellrot - na objednávku	305405-167
Weinrot	300505-167	Dunkelrot	308105-167
Schokobraun	887505-167	Braun maron - na objednávku	na809905-167
Brillantblau	500705-167	Stahlblau	515005-167
Smaragdgrün - na objednávku	na611005-167	Moosgrün	600505-167
Dunkelgrün	612505-167	Lichtgrau	725105-167
Grau	715505-167	Achatgrau	703805-167
Quarzgrau	703905-083	Anthrazitgrau	701605-048
Anthrazitgrau	701605-167	Basaltgrau	701205-167
Schwarzbraun	851805-167	Antique Oak	3211006-148
Irish Oak	3211005-148	Rustic Cherry	3214007-195
Soft Cherry	3214009-195	Tabasco Teak	2222004-195
Macore	3162002-167		

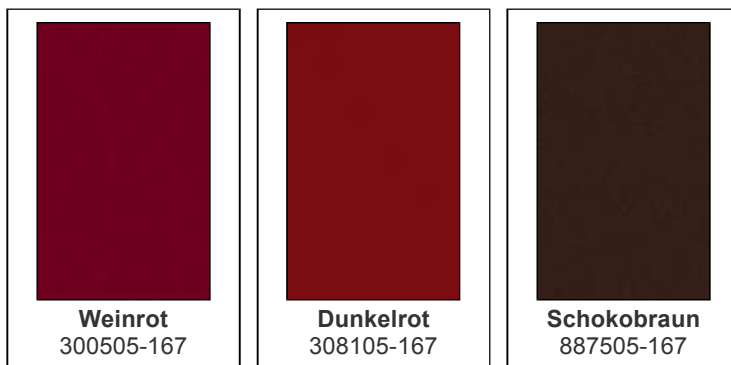

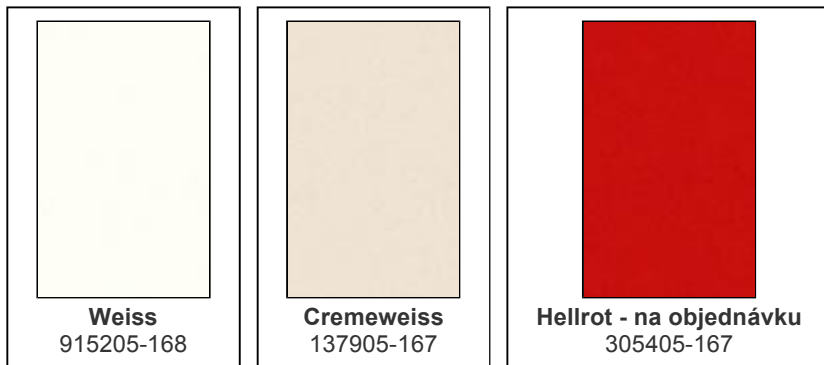

			
<b>Lichtgrau</b> 725105-167	<b>Grau</b> 715505-167	<b>Achatgrau</b> 703805-167	<b>Quarzgrau</b> 703905-083
			
<b>Anthrazitgrau</b> 701605-048	<b>Anthrazitgrau</b> 701605-167	<b>Basaltgrau</b> 701205-167	<b>Schwarzbraun</b> 851805-167
			
<b>Antique Oak</b> 3211006-148	<b>Irish Oak</b> 3211005-148	<b>Rustic Cherry</b> 3214007-195	<b>Soft Cherry</b> 3214009-195
			
<b>Tabasco Teak</b> 2222004-195	<b>Macore</b> 3162002-167		